 




GETTING TO KNOW YOUR HEATER

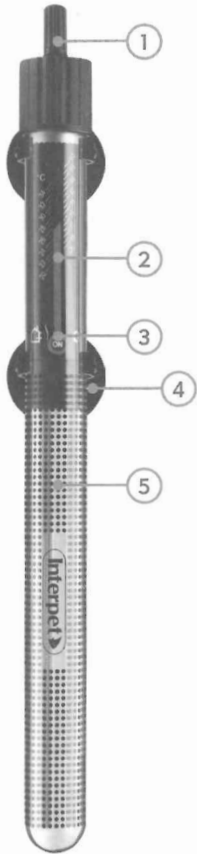

Part	Part Description
1	Temperature dial
2	Temperature Indicator
3	On/Off light
4	Sucker and clip
5	Metal heating element

INSTALLATION

  
- Set the temperature using the dial on the top of the heater. For tropical species it should be set between 23°C and 26°C.
- Using the suckers provided, install the heater into the aquarium in an area of high flow, and ensuring it is positioned below the minimum water line of the aquarium. Position the heater at a 45° angle to get the best heating affect.

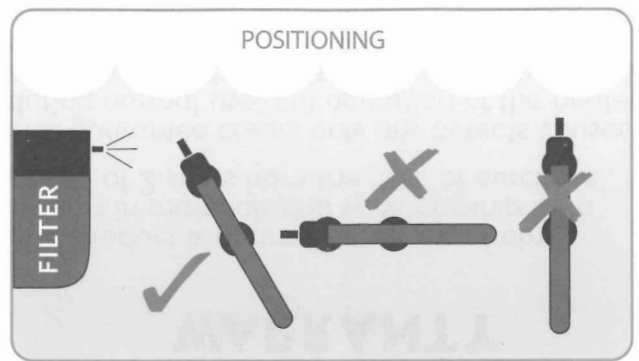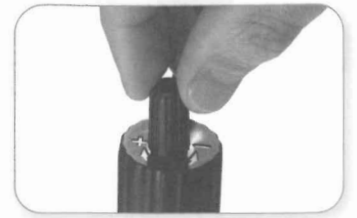

- Once the aquarium is filled with water, turn the heater on at the power supply – the red indicator light will turn on to show the heater is on, and will then turn off once the water has reached your set temperature.

Important:

 - This heater is designed to be used fully submerged, to a maximum depth of 1.2m.
- To prevent any drips of water from entering the electrical socket, a drip loop for the heater cable should be created.

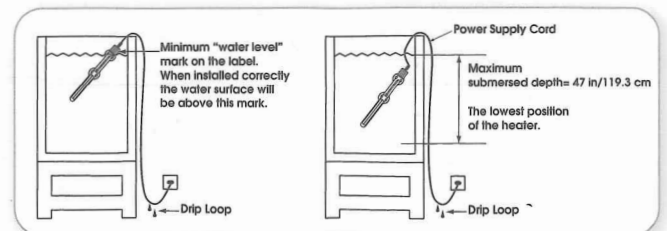

Top tip...

...a small amount of condensation might appear on the inside of the glass, this is normal and won't effect the performance of the heater.

Size	For Aquarium size		Aquarium length		Power
	Litres	Gallons	cm	Inches	Watts
25w	4-30	1-7	30	11	25
50w	23-45	5-10	46	18	50
100w	45-90	10-20	61	24	100
150w	68-135	15-30	76	30	150
200w	90-180	20-40	91	36	200
300w	135-270	30-60	122	48	300

MAINTENANCE

- Switch off and unplug the heater, then allow to cool for 10 minutes before removing from the aquarium.
- Clean the heater using fresh, clean water.
- Reinstall the heater into the aquarium at the 45° angle – ensuring the heater is positioned below the minimum water line.
- Then turn the power for the heater back on.

SAVE THESE INSTRUCTIONS FOR FUTURE USE